



**NEW VINTAGE USA
DETROIT**

69 FIREBIRD BRACKET INSTALLATION



1. Remove original cover bezel and gauges assembly from the dash. Disconnect any wiring, speedometer cable, etc.
2. Remove the original gauges but leave the original spacer.

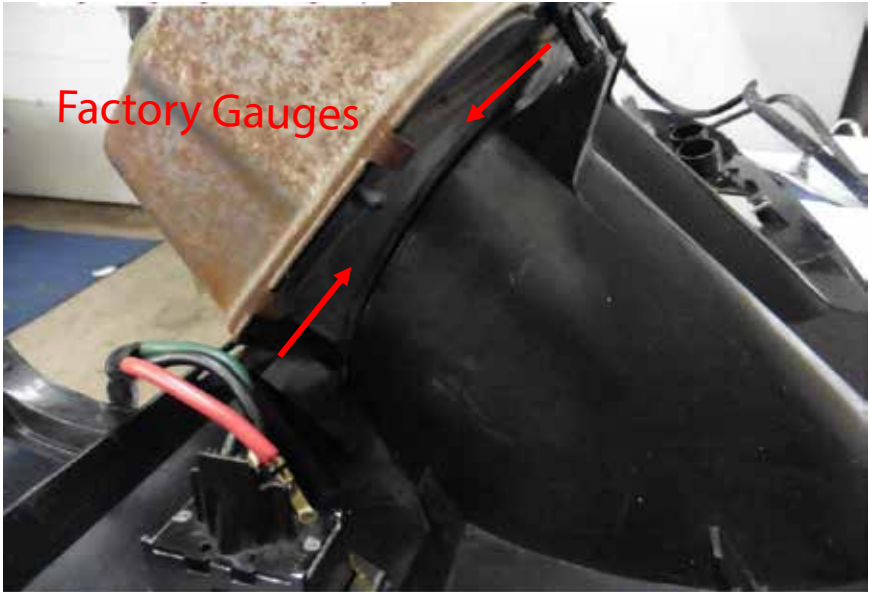


FIG 1. Original spacer in place (red arrows)



Original Spacer removed from Cluster

4. Place the gauges in Direct Fit Bracket
(Back Clamps and Hardware provided)




Front



Back

5. Install Direct Fit Bracket to Factory Bezel
(This is how your Gauges should look prior to mounting to Factory Dash)

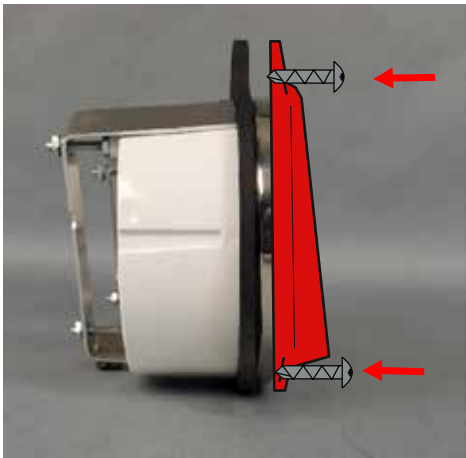

Factory Spacer
(Illustrated in Red)



Factory Spacer should look
like the above image

6. Install Direct Fit Bracket to Factory Bezel
(This is how your Gauges should look prior to mounting to Factory Dash)



7. Install Complete

